Wedgegard® Type SAE Spacer Manual Reset

Torque Table / ft-lbs



 
DATASHEET Version 6/2023

SAE SPACER			SAE 31 W37		SAE35 W37		SAE 41 W37		SAE 51 W50		SAE60 W50		SAE 70 W75		SAE 80 W75	
WEDGEPIN SIZE																
BRASS = B / STEEL = S	В	s	В	s	В	s	В	s	В	s	В	s	В	s	В	s
TORQUE CODES	Wedgepins x 3		Wedgepins x 4		Wedgepins x 4		Wedgepins x 4									
0	99	136	99	136	119	165	119	165	282	388	434	594	-	ı	-	_
ow	137	188	137	188	167	229	167	229	-	-	-	-	-	-	-	-
GD	185	254	185	254	225	309	225	309	-	-	-	-	-	-	-	-
w	257	353	257	353	311	428	311	428	615	845	944	1296	2424	3328	2424	3328
WY	370	509	370	509	449	617	449	617	835	1147	1281	1760	3402	4673	3402	4673
Y	489	671	489	671	593	814	593	814	1092	1580	1675	2424	4313	5920	4313	5920
YB	648	890	648	890	786	1080	786	1080	1596	2192	2449	3363	5874	8066	5874	8066
BN	671	-	671	-	814	-	814	-	-	-	-	-	-	-		-
В	763	1048	763	1048	926	1272	926	1272	2192	3011	3363	4619	7036	9661	7036	9661
BG	890	1222	890	1222	1080	1482	1080	1482	2738	3760	4200	5769	8310	11411	8310	11411
G	1099	1509	1099	1509	1334	1830	1334	1830	3347	4592	5135	7046	10425	14320	10425	14320
RG	1329	1826	1329	1826	1612	2215	1612	2215	4225	5802	6483	8902	12236	16710	12236	16710
R	1497	2054	1497	2054	1814	2491	1814	2491	4370	6000	6704	9205	14047	19291	14047	19291
RK	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
к	-	-	-		-	-	-	-	4554	6253	6986	9588	16293	22375	16293	22375

^{*} For a guide on Wedgepin identification, please visit our Website.

Release Torque figure are for a full complement of Wedgepins fitted and are adjusted by reducing the number of Wedgepins fitted, or by changing the torque code.

Release Torques can be subject to the drive speed together with the rate and frequency of loading in the drive train.







Tel: +44 (0)1453 750814 Fax: +44 (0)1453 765320 www.howdon.co.uk sales@howdon.co.uk

