

# Wedgegard® Type CFS Flexible Coupling

## Torque Table / ft-lbs



DATASHEET Version 6/2023

Model	CFS 500-160		CFS 500-198		CFS 700-220		CFS 700 - 275		CFS 950 - 350		CFS 1000 - 425	
WEDGEPIN	W37		W37		W50		W50		W100		W100	
BRASS= B STEEL = S	B	S	B	S	B	S	B	S	B	S	B	S
TORQUE CODES	* Wedgepins x 3		* Wedgepins x 3		* Wedgepins x 3		* Wedgepins x 4		* Wedgepins x 4		* Wedgepins x 4	
O	115	158	115	158	279	382	279	382	-	-	-	-
OW	159	218	159	218	422	605	422	605	-	-	-	-
GD	215	295	215	295	-	-	-	-	-	-	-	-
W	298	409	298	409	607	833	607	833	1998	2743	-	12225
WY	429	590	429	590	824	1131	824	1131	2804	3852	-	18195
Y	567	778	567	778	1077	1558	1077	1558	3553	4879	-	24480
YB	751	1032	751	1032	1574	2162	1574	2162	4841	6648	-	30743
BN	778	-	778	-	-	-	-	-	-	-	-	-
B	885	1216	885	1216	2162	2970	2162	2970	5799	7963	-	34644
BG	1032	1417	1032	1417	2700	3709	2700	3709	6849	9405	-	40933
G	1275	1750	1275	1750	3301	4529	3301	4529	8593	11803	-	48930
RG	1541	2118	1541	2118	4168	5723	4168	5723	10085	13773	-	-
R	1734	2382	1734	2382	4309	5918	4309	5918	11576	15899	-	56352
RK	-	-	-	-	-	-	-	-	-	-	-	-
K	-	-	-	-	4491	6167	4491	6167	13430	18442	-	59673

\* For a guide on Wedgepin identification, please visit our Website.

Release Torque figure are for a full complement of Wedgepins fitted and are adjusted by reducing the number of Wedgepins fitted, or by changing the torque code.

Release Torques can be subject to the drive speed together with the rate and frequency of loading in the drive train.

\*\*All figures quoted above are calculated using gradually applied loads.



Tel: +44 (0)1453 750814  
 Fax: +44 (0)1453 765320  
 www.howdon.co.uk  
 sales@howdon.co.uk

